HOME
DECORATORS
COLLECTION

BF-25075 WALL MOUNTED LAUNDRY STORAGE 24"H×27"W

INV#13643

ASSEMBLY INSTRUCTIONS

Made In China

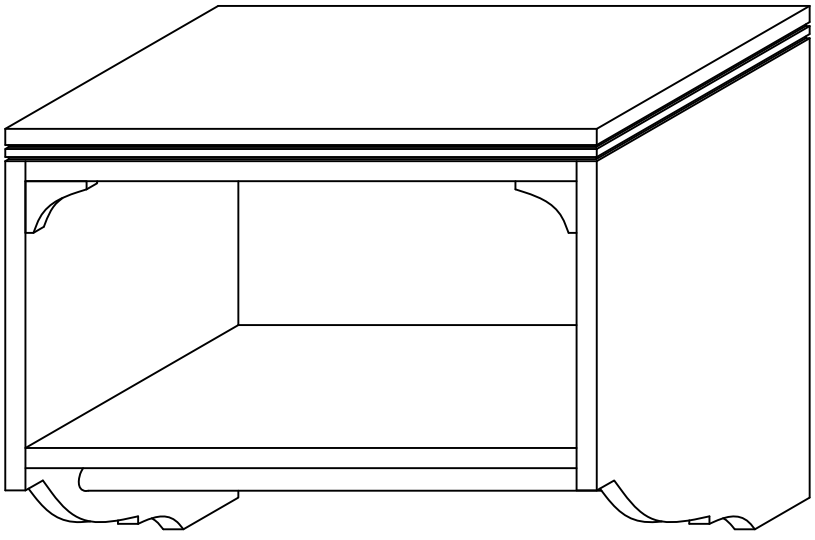

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A TOP PANEL-1PC	B 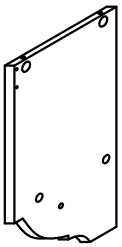 LEFT SIDE PANEL-1PC	C 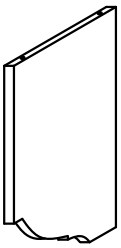 RIGHT SIDE PANEL-1PC
D  ADORNING PANEL-1PC	E  PANELS-2PCS	F  CIRCINAL WOOD -1PC
G  ACROSS PANEL-1PC	H LEFT PANEL-1PC	I RIGHT PANEL-1PC
J 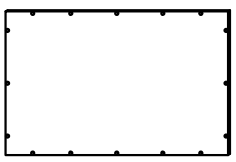 BACK PANEL-1PC	K 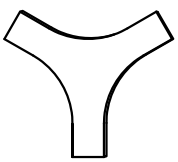 CAM-TOOL-1PC	L 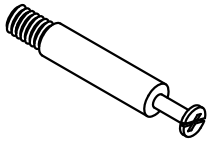 CAM-BOLTS-8PCS

M CAM-LOCKS-8PCS	N 8mm× 1" 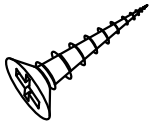 SCREWS-7PCS	O CAM-LOCK CAPS-4PCS
P GECKOS-6PCS	Q 8mm× 1-1/2" 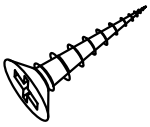 SCREWS-6PCS	R 7mm× 5/8" SCREWS-16PCS
S  SHEETIRONS-2PCS	T 6mm× 5/8" SCREWS-6PCS	U EVA PADS-2PCS
V 8mm× 3/4" 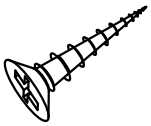 SCREWS-2PCS		

NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

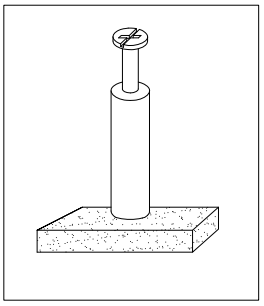

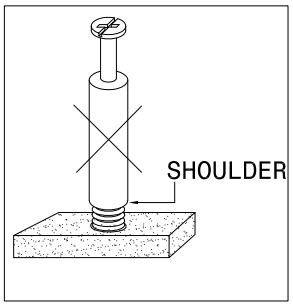

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

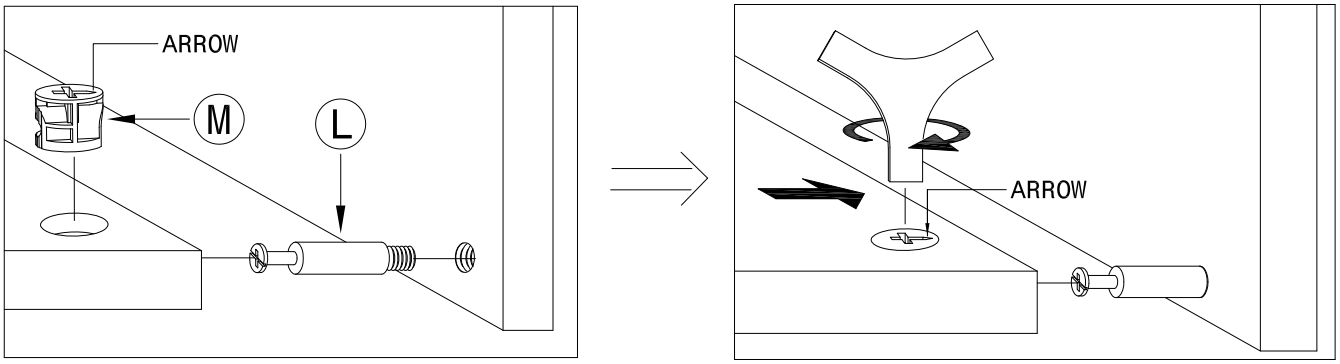

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

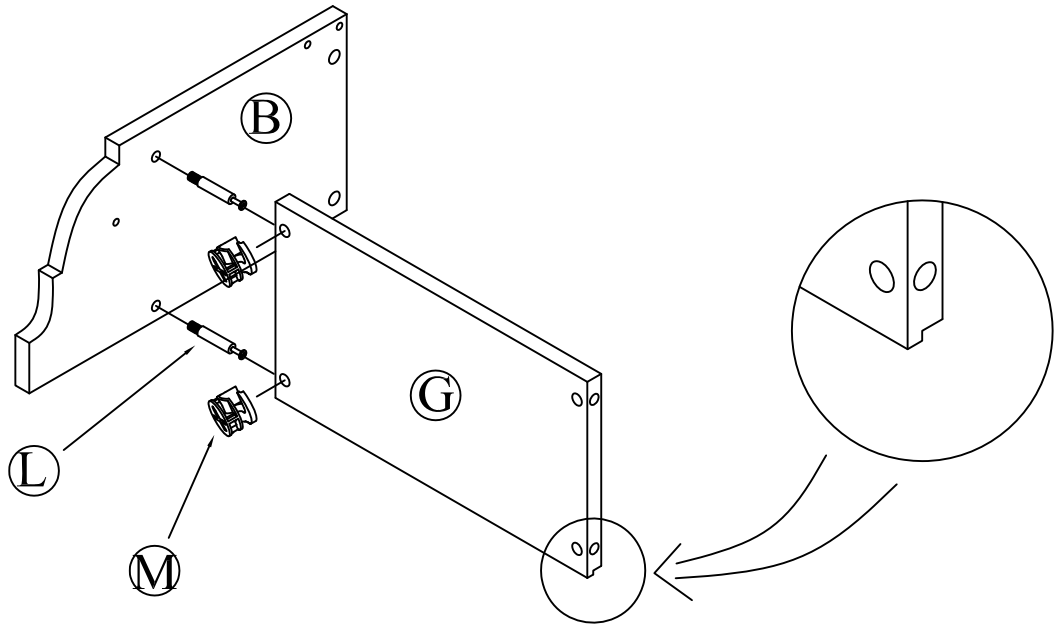

1). ASSEMBLE THE LEFT SIDE PANEL(B).

- ROTATE 2 CAM-BOLTS(L) INTO THE HOLES IN THE LEFT SIDE PANEL(B).
- PLACE CAM-BOLTS(L) INTO THE HOLES IN THE PANEL(G) AND ATTACH USING 2 CAM-LOCKS(M).

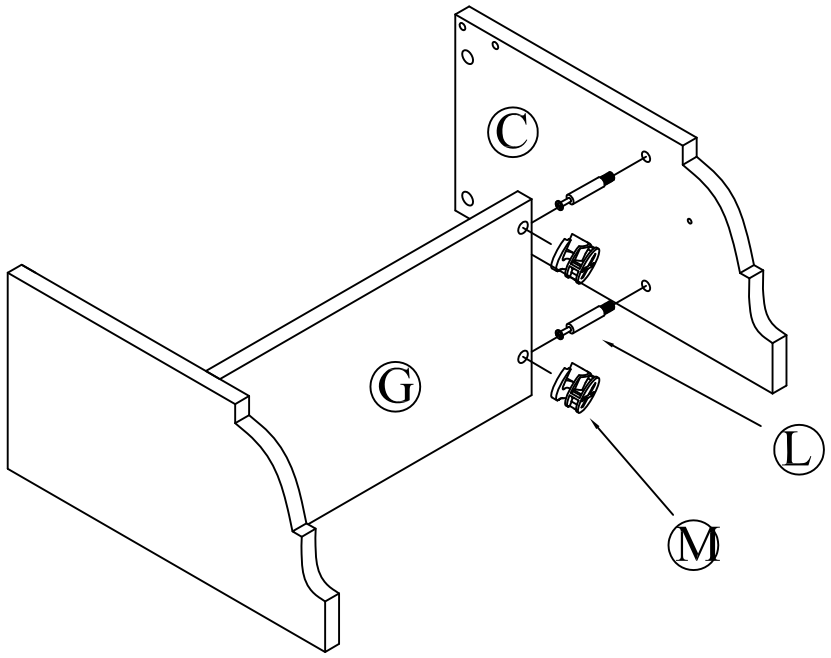

2). ASSEMBLE THE RIGHT SIDE PANEL(C).

- ROTATE 2 CAM-BOLTS(L) INTO THE HOLES IN THE RIGHT SIDE PANEL(C).
- PLACE CAM-BOLTS(L) INTO THE HOLES IN THE PANEL(G) AND ATTACH USING 2 CAM-LOCKS(M).

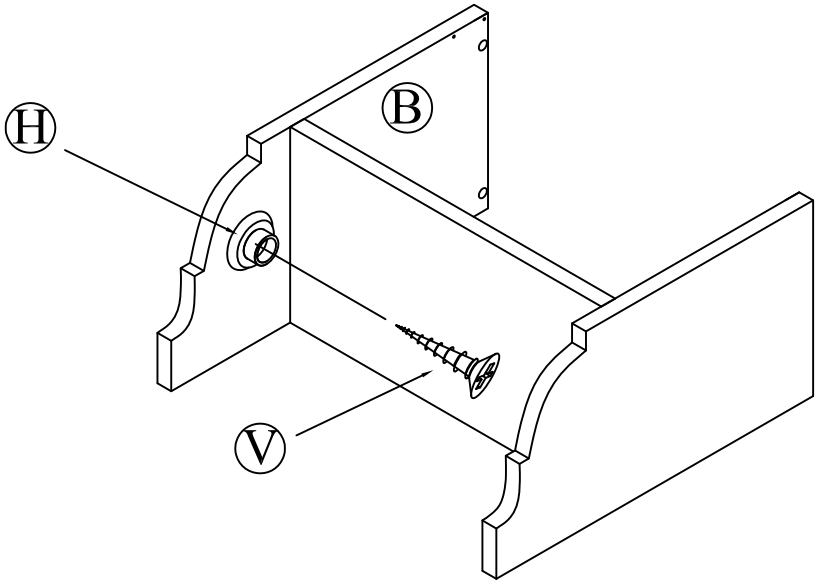

3). ASSEMBLE THE LEFT PANEL(H).

- ATTACH THE LEFT PANEL(H) TO LEFT SIDE PANEL(B) USING 1 SCREW(V).

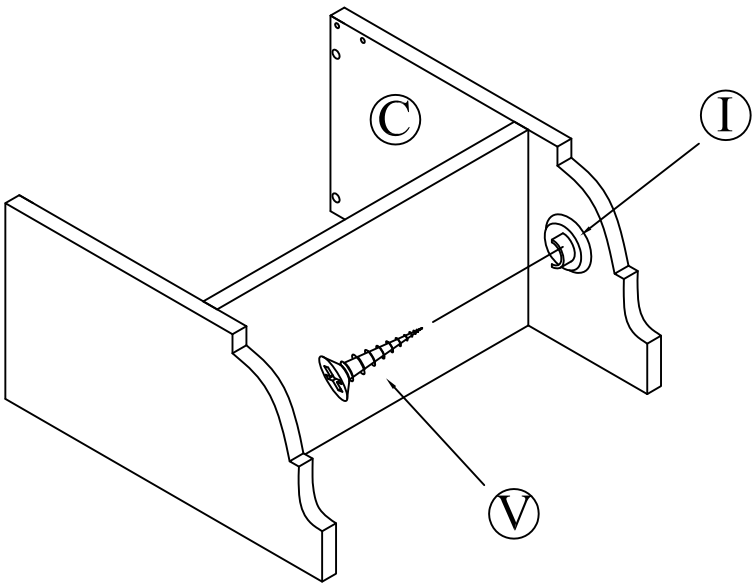

4). ASSEMBLE THE RIGHT PANEL(I).

- ATTACH THE RIGHT PANEL(I) TO RIGHT SIDE PANEL(C) USING 1 SCREW(V).

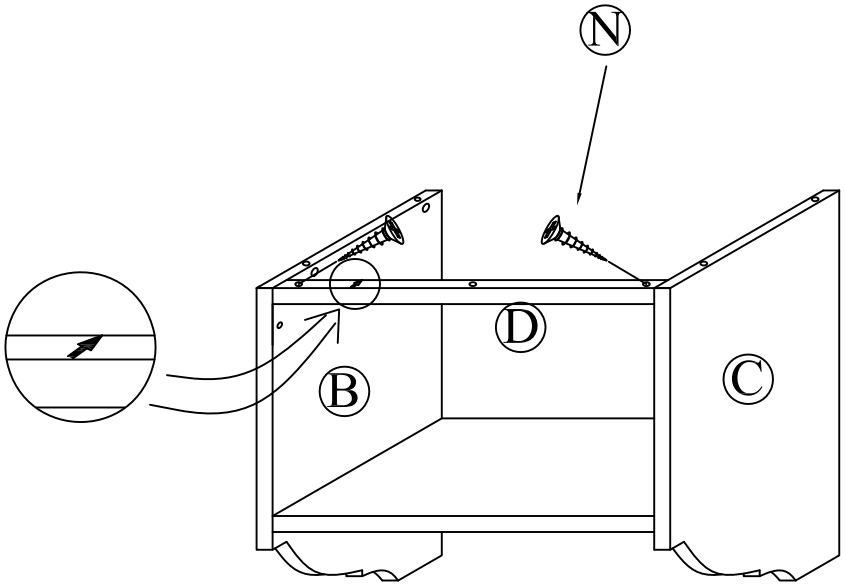

5). ASSEMBLE THE ADORNING PANEL(D).

- ATTACH THE ADORNING PANEL(D) TO PANEL(B/C) USING 2 SCREWS(N).

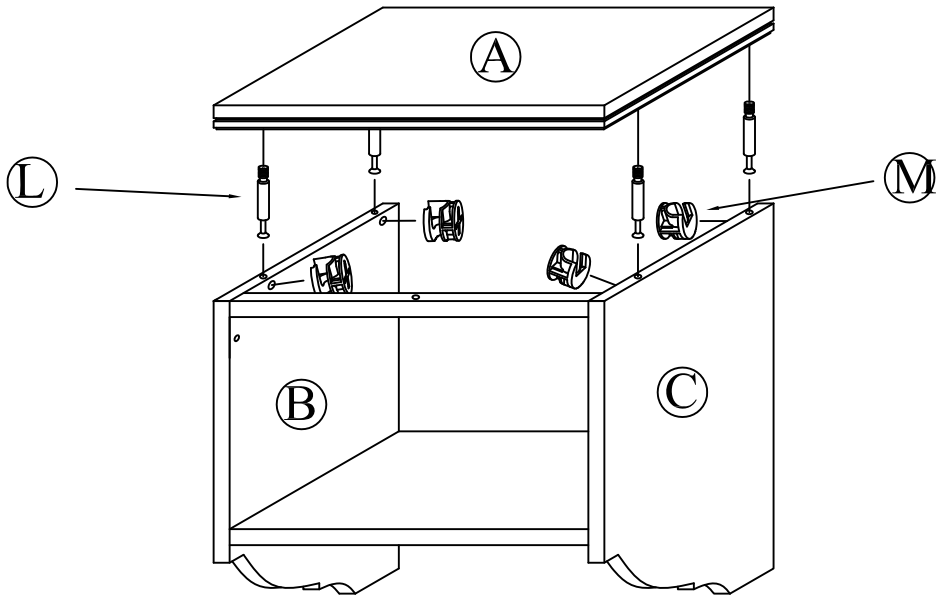

6). ASSEMBLE THE TOP PANEL(A).

- ROTATE 4 CAM-BOLTS(L) INTO THE HOLES IN THE TOP PANEL(A).
- PLACE CAM-BOLTS(L) INTO THE HOLES IN THE PANEL(B/C) AND ATTACH USING 4 CAM-LOCKS(M).

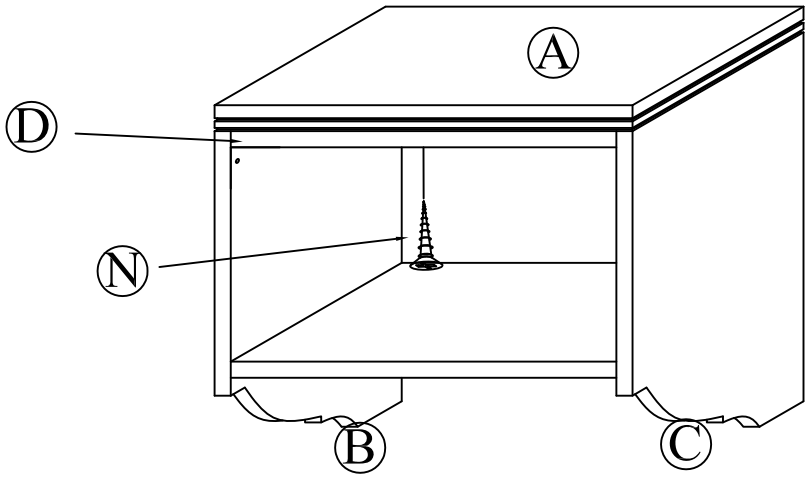

7). ASSEMBLE THE ADORNING PANEL(D).

- ROTATE 1 SCREW(N) INTO THE HOLE IN THE ADORNING PANEL(D).

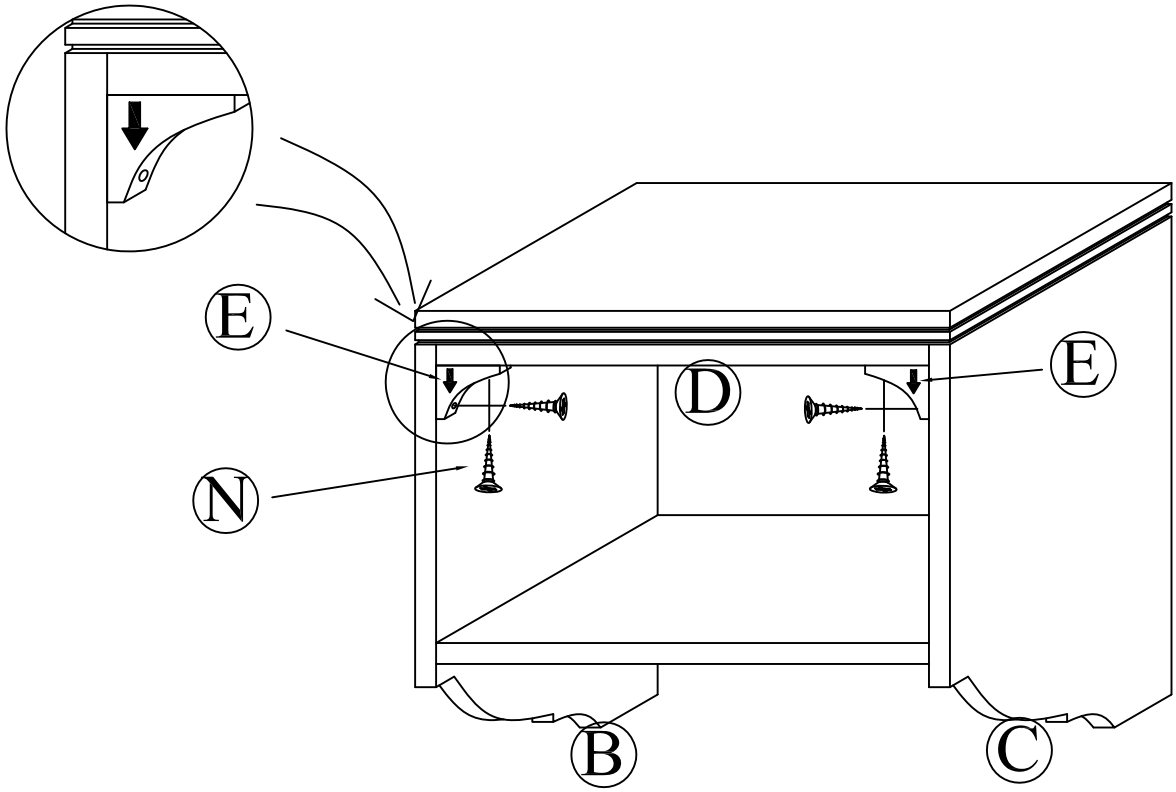

8). ASSEMBLE THE PANELS(E).

- ATTACH THE PANELS(E) TO PANEL(B/C/D) USING 4 SCREWS(N).

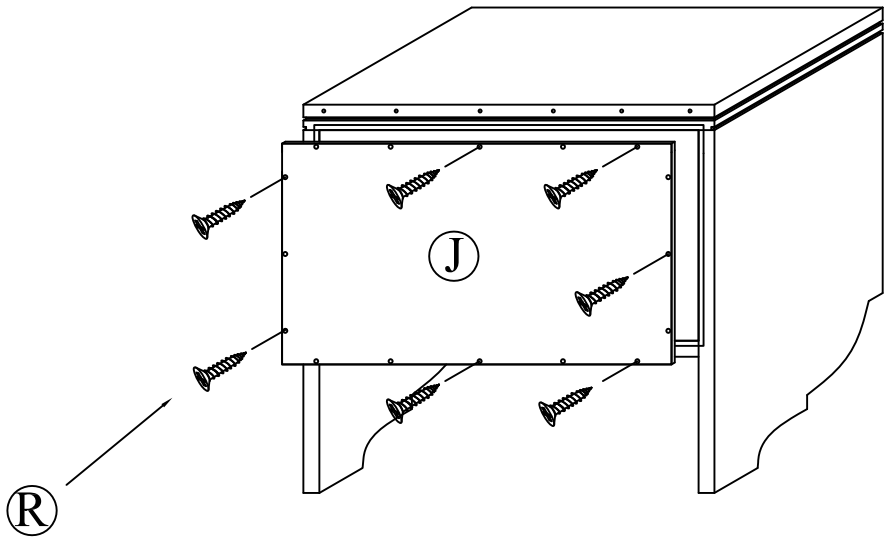

9). ASSEMBLE THE BACK PANEL(J).

- ATTACH THE BACK PANEL(J) USING 16 SCREWS(R).

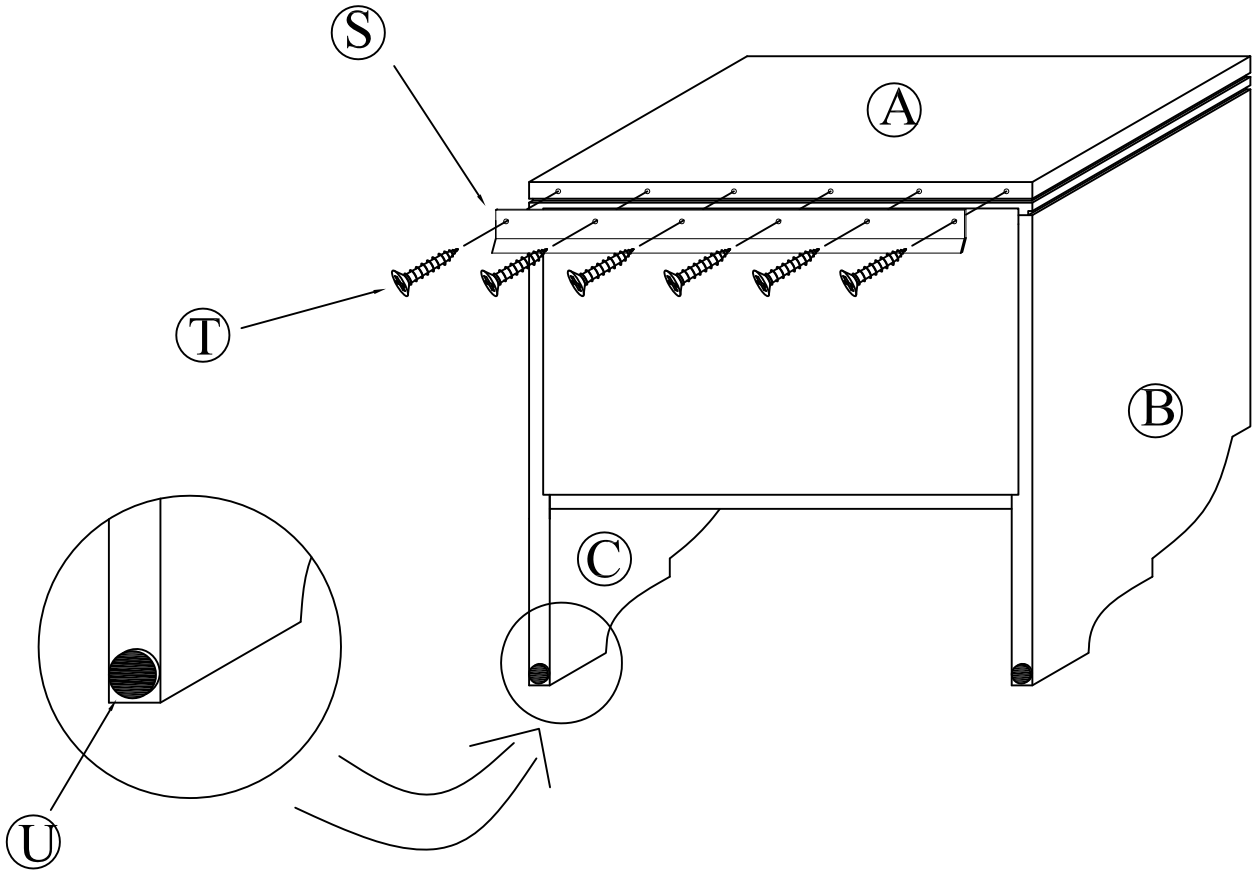

10). ASSEMBLE THE SHEETIRON(S) AND EVA PADS(U).

- ATTACH THE SHEETIRON(S) TO TOP PANEL(A) USING 6 SCREWS(T).
- ATTACH 2 EVA PADS(U) TO SIDE PANEL(B/C).

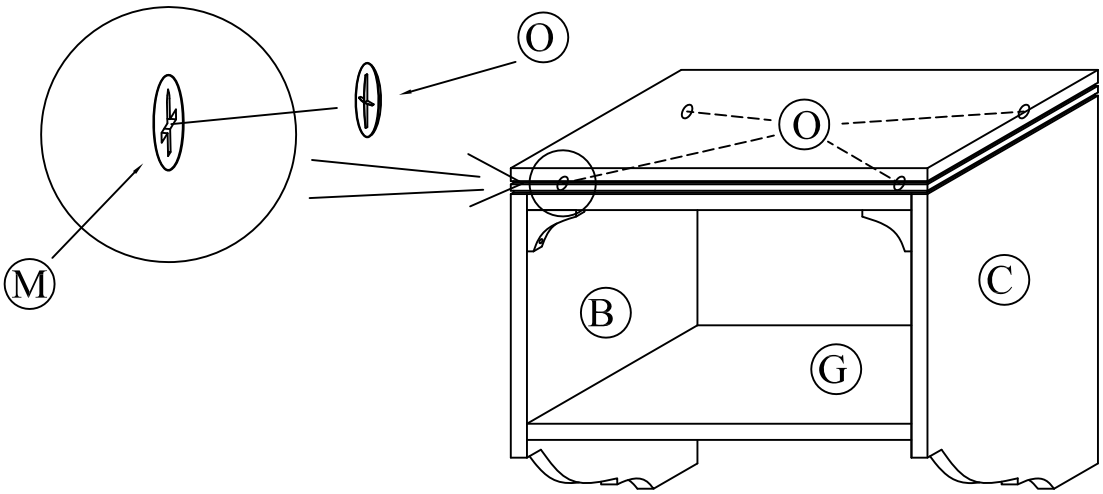

11).ASSEMBLE THE CAM-LOCK CAPS(O).

- ATTACH THE 4 CAM-LOCK CAPS(O) ONTO THE 4 CAM-LOCKS(M).

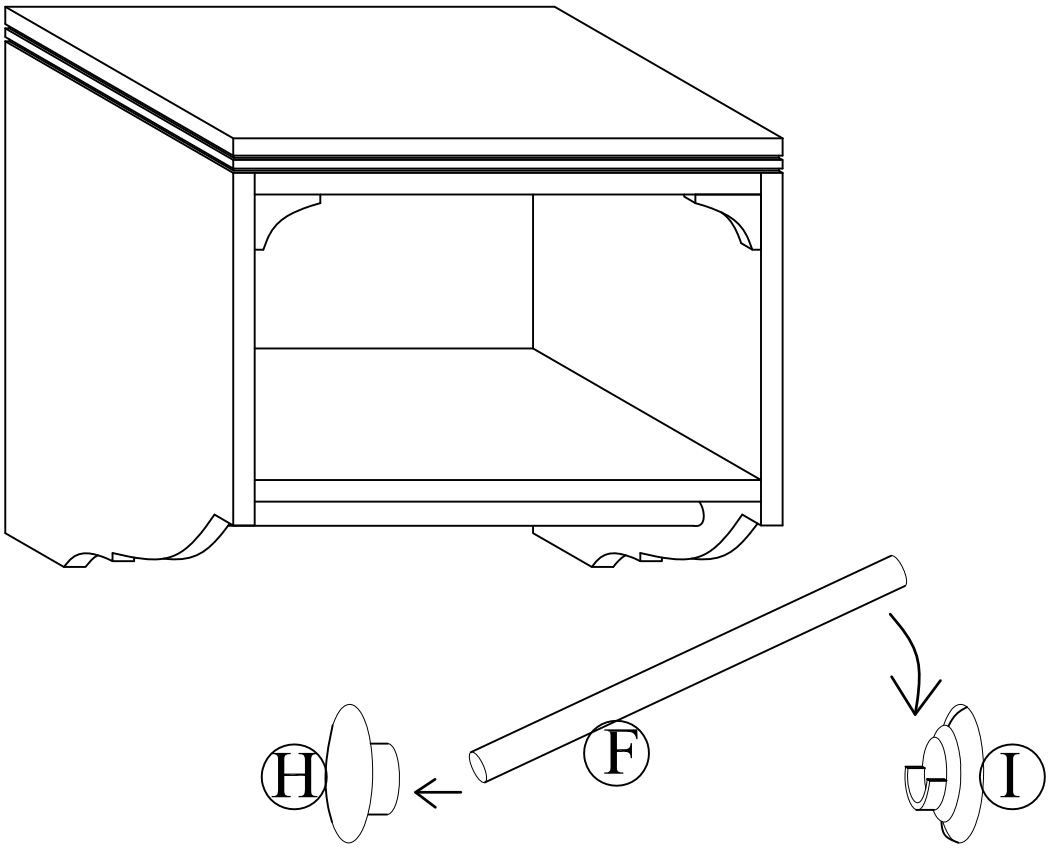

12).ASSEMBLE THE CIRCINAL WOOD(F).

- INSERT THE CIRCINAL WOOD(F) INTO THE HOLES IN PANEL(H/I).
  WHEN INSTALLED, PLS PUT THE CIRCINAL WOOD(F) IN THE LEFT PANEL(H),
  THEN PUT IT INTO THE RIGHT PANEL(I). WHEN DISMANTLED, PLS REMOVE THE CIRCINAL
  WOOD(F) FROM THE RIGHT PANEL(I) FIRST.

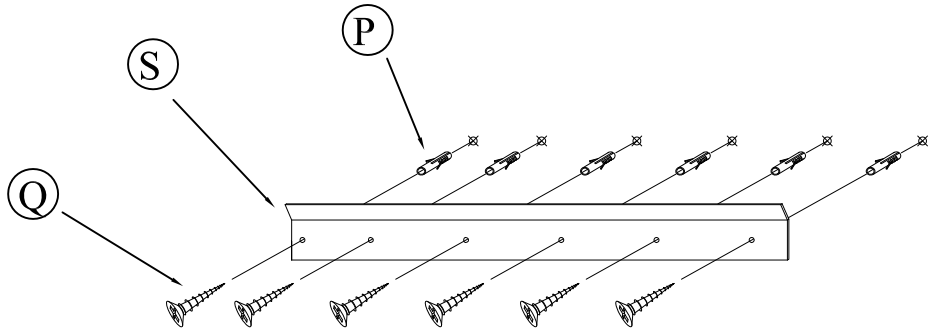

wall

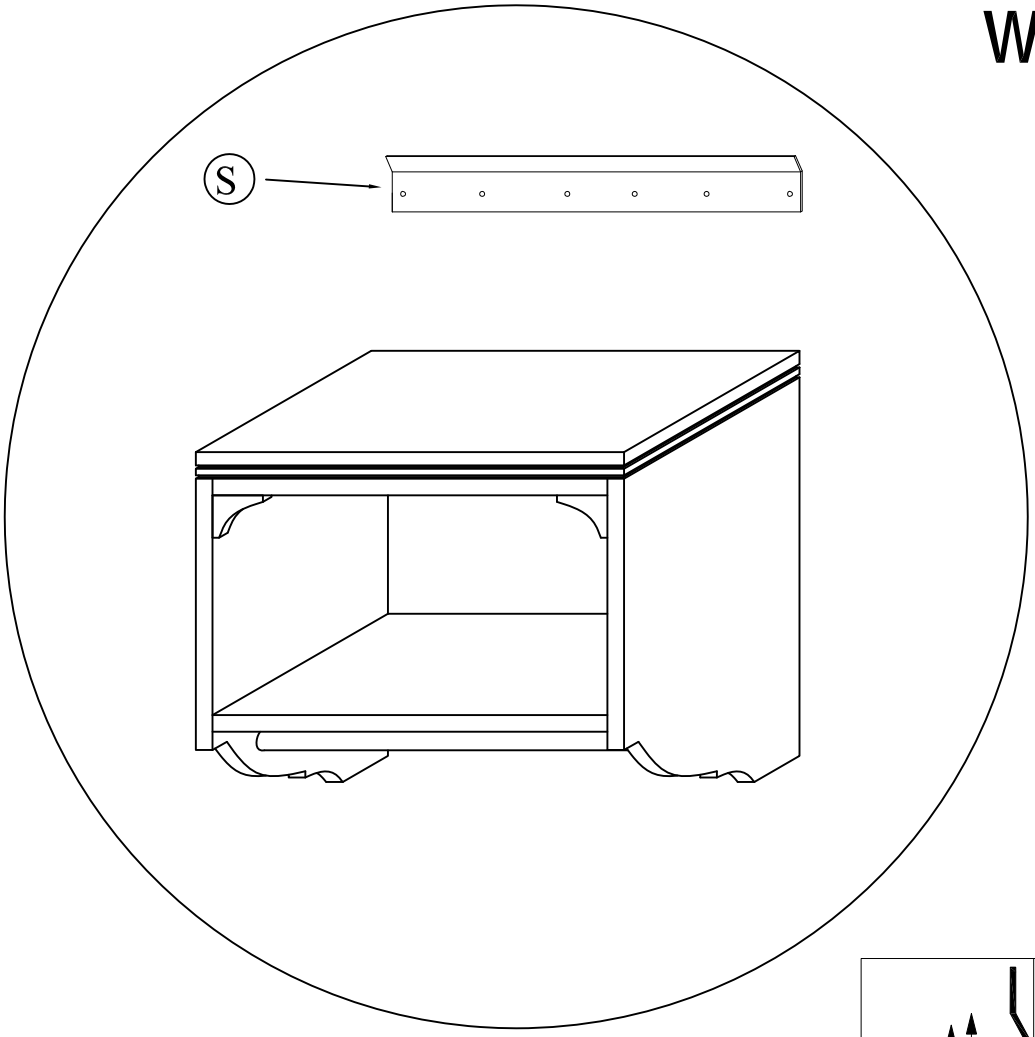

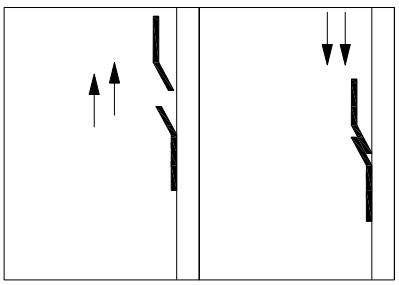

13).ASSEMBLE THE GECKOS(P).

- DRILL 6 HOLES INTO THE WALL, PLEASE REFER TO THE REAR BACK PANEL'S HOLE DISTANCE AND HEIGHT.
- TAP 6 GECKOS(P) INTO THE HOLES ON THE WALL. THEN ROTATE 6 SCREWS(Q) INTO THE GECKOS(P).
- HANG THE CABINET ONTO THE SHEETIRON(S).